 


SAMSUNG

THREE-CD CHANGER MINI-COMPACT SYSTEM **MP3-CD/CD-R/RW PLAYBACK** MAX-ZJ730

Instruction Manual

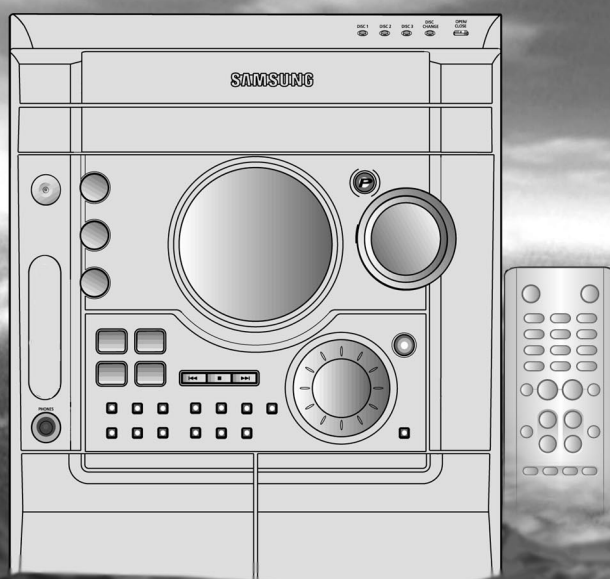

Safety Warnings

GB

CLASS 1 LASER PRODUCT
 KLASSE 1 LASER PRODUKT
 LUOKAN 1 LASER LAITE
 KLASSE 1 LASER APPARAT
 PRODUCTO LASER CLASE 1



CAUTION
 RISK OF ELECTRIC SHOCK.
 DO NOT OPEN



CAUTION:
 TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT
 REMOVE REAR COVER. NO USER SERVICEABLE
 PARTS INSIDE. REFER SERVICING TO QUALIFIED
 SERVICE PERSONNEL.

Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

CAUTION-INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS DEFEATED, AVOID EXPOSURE TO BEAM.



This symbol indicates that dangerous voltage which can cause electric shock is present inside this unit.



This symbol alerts you to important operating and maintenance instructions accompanying the unit.

WARNING: To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

CLASS 1 LASER PRODUCT

This Compact Disc player is classified as a CLASS 1 LASER product.

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

Wiring the Main Power Supply Plug(UK Only)

IMPORTANT NOTICE

The main lead on this equipment is supplied with a moulded plug incorporating a fuse. The value of the fuse is indicated on the pin face of the plug and if it requires replacing, a fuse approved to BS1362 of the same rating must be used.

Never use the plug with the fuse cover removed. If the cover is detachable and a replacement is required, it must be of the same colour as the fuse fitted in the plug. Replacement covers are available from your dealer.

If the fitted plug is not suitable for the power points in your house or the cable is not long enough to reach a power point, you should obtain a suitable safety approved extension lead or consult your dealer for assistance.

However, if there is no alternative to cutting off the plug, remove the fuse and then safely dispose of the plug. Do not connect the plug to a main socket as there is a risk of shock hazard from the bared flexible cord.

Never attempt to insert bare wires directly into a main socket. A plug and fuse must be used at all times.

IMPORTANT

 
The wires in the main lead are coloured in accordance with the following code:—

BLUE = NEUTRAL BROWN = LIVE

As these colours may not correspond to the coloured markings identifying the terminals in your plug, proceed as follows:—

The wire coloured BLUE must be connected to the terminal marked with the letter N or coloured BLUE or BLACK.

The wire coloured BROWN must be connected to the terminal marked with the letter L or coloured BROWN or RED.

WARNING: DO NOT CONNECT EITHER WIRE TO THE EARTH TERMINAL WHICH IS MARKED WITH THE LETTER E OR BY THE EARTH SYMBOL , OR COLOURED GREEN OR GREEN AND YELLOW.

Contents

Thank you for buying this
SAMSUNG mini-compact system.

Please take time to read these instructions.
They will allow you to operate your
system with ease and take full advantage
of its features.

GB

◆ SAFETY WARNINGS	2
◆ INSTALLING YOUR MINI-COMPACT SYSTEM	
■ Front Panel View	4
■ Window Display	5
■ Remote Control	5
■ Rear Panel View	6
■ Connecting your System to the Power Supply	6
■ Where to Install Your Mini-Compact System	6
■ Inserting Remote Control Batteries	6
■ Connecting to an External Source	7
■ Multi Jog Function	7
■ CD Digital Out Jack(optical)	7
■ Connecting the Loudspeakers	8
■ Connecting the AM (MW/LW) Aerial	9
■ Connecting the FM Aerial	9
■ Demo/Dimmer function	10
■ Setting the Clock	10
◆ CD/MP3-CD-PLAYER	
■ Loading and Changing Compact Discs	11
■ To reply the CD/MP3-CD	11
■ Selecting a CD in the Disc changer	12
■ Selecting a Track	12
■ To select the MP3-CD title and track	12
■ Searching for a Specific Music Passage on a CD	13
■ Shuffle Play Function	13
■ Medley Play	14
■ Repeating One or All Tracks on the Compact Discs	14
■ Function to skip through 10 track at a time	14
■ Last Memory Function	14
■ Programming the Order of CD Playback	15
■ Checking or Changing Programmed CD Tracks	16
◆ TUNER	
■ Searching for and Storing the Radio Stations	16
■ Selecting a Stored Station	17
■ Improving Radio Reception	17
■ About RDS broadcasting	18
■ About RDS DISPLAY function	18
■ PTY (Program Type) indication and PTY-SEARCH function	19
◆ TAPE DECK	
■ Listening to a Cassette	20
■ CD Synchro Record Feature	20
■ Recording a Compact Disc	20
■ Recording a Radio Program	21
■ Copying a Cassette (Dubbing)	21
■ Selecting the Cassette Playback Mode	21
■ Tape Counter	21
◆ OTHER FUNCTIONS	
■ Timer Function	22
■ Cancelling the Timer	22
■ Mute Function	23
■ Selecting Sound Mode	23
■ Power Surround/Power Sound Function	23
■ Setting the System to Switch off Automatically	24
■ Treble Level Function	24
■ BASS Level Function	24
■ Connecting Headphones	24
■ Microphone Function	24
◆ RECOMMENDATIONS FOR USE	
■ Safety Precautions	25
■ Cleaning Your Mini-Compact System	25
■ Precautions When Using Compact Discs	26
■ Precautions When Using Audio Cassettes	26
■ Before Contacting the After-Sales Service	26
■ Technical Specifications	27

Symbols



Press



Push



 
Important



Note

Front Panel View


GB

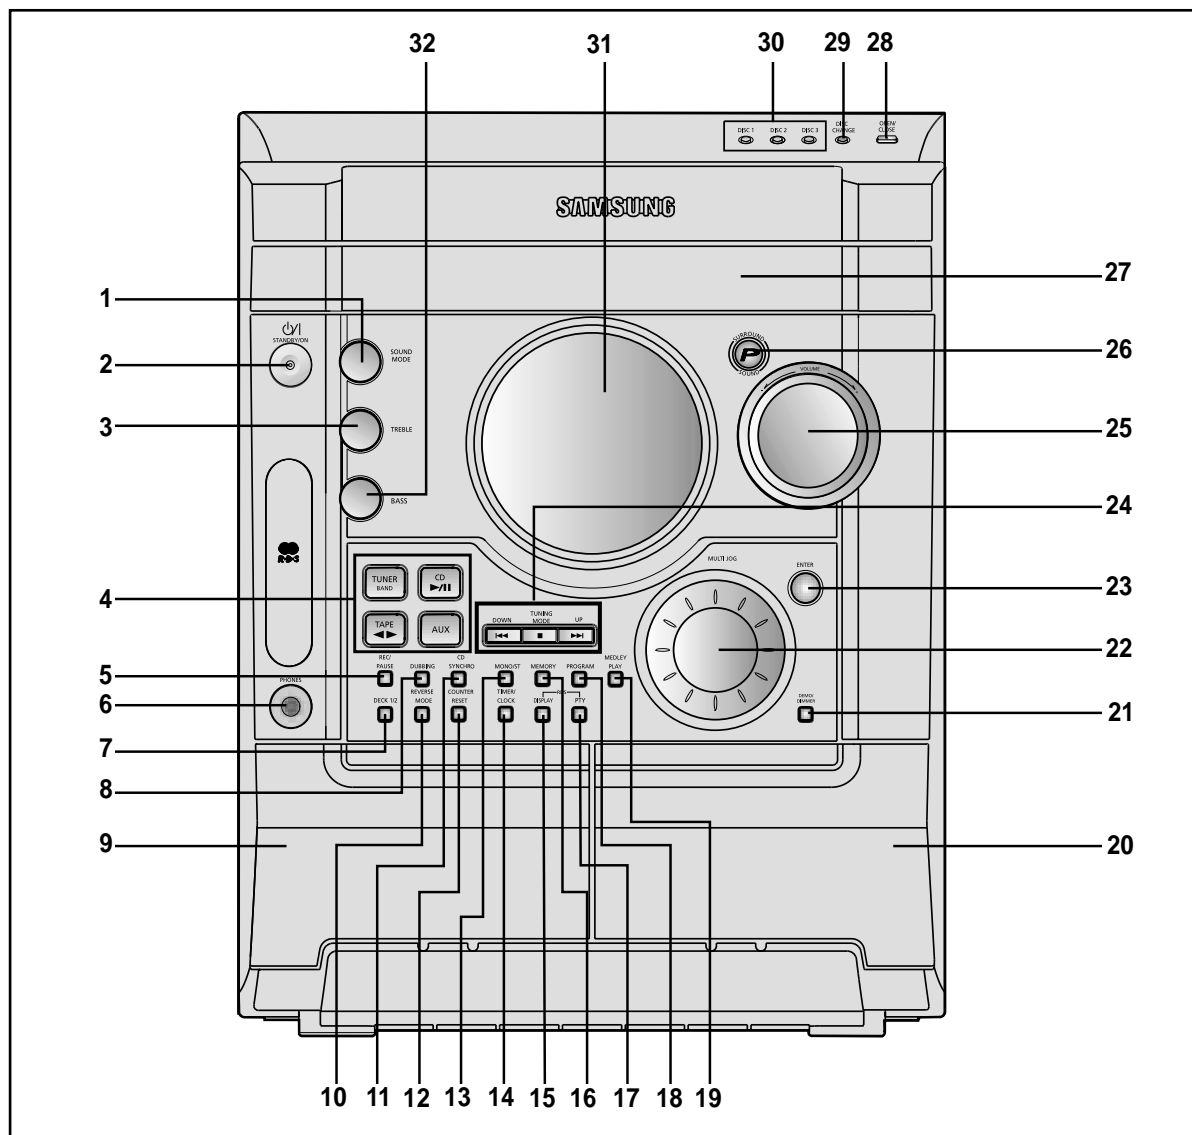

- | | |
|-------------------------------|---|
| 1. Sound Mode | 18. CD Program/Last Memory On/Off(MP3-CD) |
| 2. Standby/On | 19. CD Medley play |
| 3. Treble | 20. Cassette Deck 2 |
| 4. Function Selection buttons | 21. Demo/Dimmer |
| 5. Record/Pause | 22. Multi Jog /MP3-CD Album Select |
| 6. Headphone Jack Connector | 23. Enter |
| 7. Deck 1/2 | 24. Search Function buttons |
| 8. Tape Normal Speed Dubbing | 25. Volume increase or decrease |
| 9. Cassette Deck 1 | 26. Power Surround/Power Sound |
| 10. Tape Reverse Mode | 27. Compact Disc Compartment |
| 11. CD Synchro Recording | 28. Open/Close |
| 12. Tape Counter Reset | 29. Disc Change |
| 13. FM Mono/Stereo | 30. Disc Selection buttons |
| 14. Timer/Clock | 31. Window Display |
| 15. Display(RDS) | 32. Bass |
| 16. Tuner Memory | |
| 17. PTY(RDS) | |


Window Display

 GB

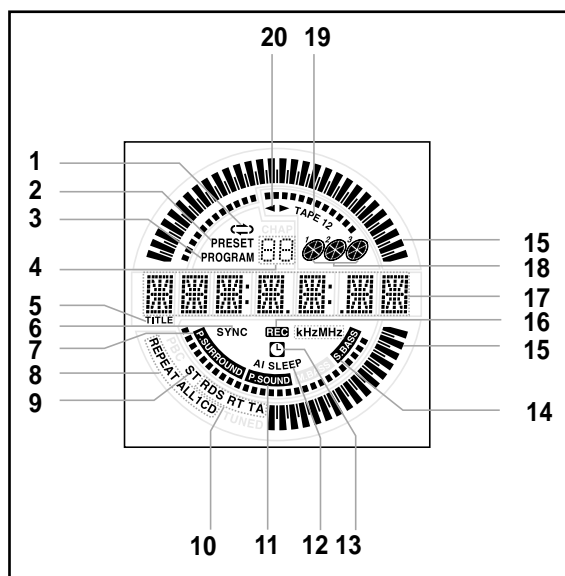

1. TAPE REVERSE MODE
2. TUNER PRESET
3. CD PROGRAM OR TUNER MEMORY TO PROGRAM
4. CD PROGRAM AND TUNER PRESET NUMBER
5. TITLE(MP3-CD)
6. CD SYNCHRO RECORDING
7. POWER SURROUND
8. CD PLAYING DISC MODE OR CD REPEAT MODE
9. FM MODE (STEREO)
10. FM RDS MODE
11. POWER SOUND
12. AI SLEEP OR SLEEP
13. CLOCK
14. SUPER BASS
15. VOLUME
16. RECORDING
17. MAIN DISPLAY (FUNCTION, FREQUENCY, TIME, ETC.)
18. PLAYING DISC NUMBER
19. TAPE 1/2
20. TAPE RUNNING INDICATION

 
Remote Control

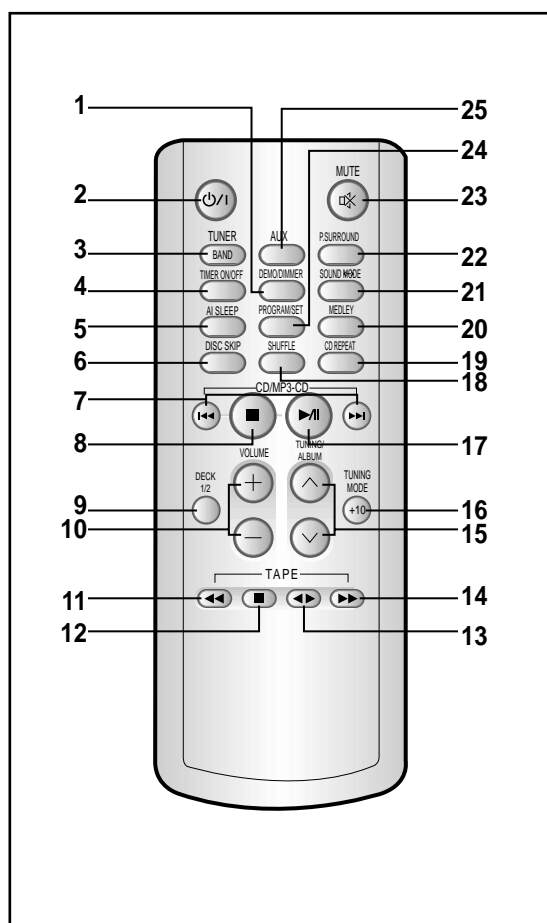

1. DEMO/DIMMER
2. POWER(STANDBY/ON)
3. TUNER/BAND
4. TIMER ON/OFF
5. AI SLEEP
6. DISC SKIP
7. CD TRACK SKIP OR SEARCH
8. CD STOP
9. DECK 1/2
10. VOLUME CONTROL
11. TAPE REWIND
12. TAPE STOP
13. TAPE PLAY
14. TAPE FAST-FORWARD
15. TUNING UP OR DOWN/MP3-CD ALBUM SELECT
16. TUNING MODE/CD +10
17. CD PLAY/PAUSE
18. CD SHUFFLE PLAY
19. CD REPEAT
20. CD MEDLEY PLAY
21. SOUND MODE
22. P.SURROUND/P.SOUND
23. MUTE
24. PROGRAM/SET/MP3-CD LAST MEMORY ON/OFF
25. AUX

Rear Panel View

 GB

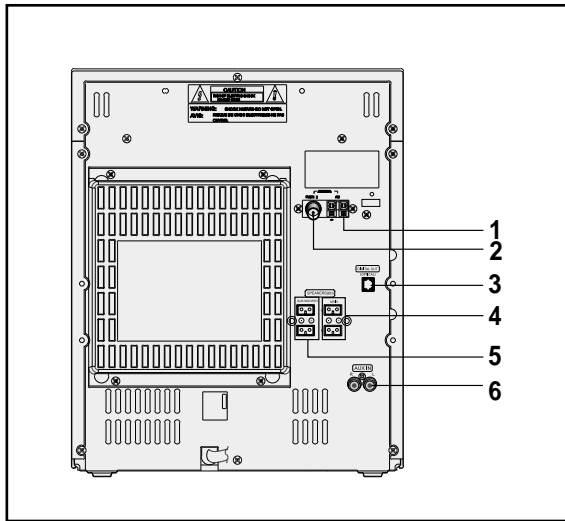


1. AM Aerial Connector Terminals
2. FM Aerial Connector Terminal
3. CD Digital Out Jack (Optical)
4. Main Speakers Connector Terminals
5. Subwoofer Speakers Connector Terminals
6. AUX-Input

Connecting your System to the Power Supply

The main lead must be plugged into an appropriate socket.

- ☛ Before plugging your system into a main socket, you must check the voltage setting. If the voltage of the socket does not correspond to the setting on the rear of the unit, you may seriously damage your system.

 
- 1 Plug the main lead (marked **AC Cord** on the rear of the system) into an appropriate socket.
- 2 Press the **STANDBY/ON** button to switch your mini-compact system on.

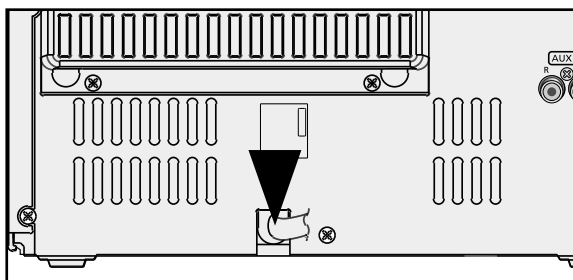

Where to Install Your Mini-Compact System

To take full advantage of your new mini-compact system, follow these installation instructions before connecting the unit.

 - ◆ Install the system on a flat, stable surface.
- ◆ Never place this unit on carpeting.
- ◆ Never place this unit in an outdoor area.
- ◆ Maintain an open space of approximately 6 inches (15 cm) on the sides and rear of the system, for ventilation purposes.
- ◆ Make sure that you have enough room to open the compact disc compartment easily.
- ◆ Place the loudspeakers at a reasonable distance on either side of the system to ensure good stereo sound.
- ◆ Direct the loudspeakers towards the listening area.
- ◆ For optimum performance, make sure that both speakers are placed at an equal distance above the floor.

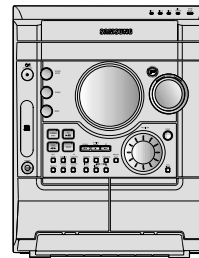

Inserting Remote Control Batteries

 
Insert or replace remote control batteries when you:

- ◆ Purchase the mini-compact system
- ◆ Find that the remote control is no longer operating correctly

- ☛ When replacing the batteries, use a new set of batteries and never mix alkaline and manganese batteries.

- 1 Place your thumb on the position marked ▼ on the battery compartment cover (rear of the remote control) and push the cover in the direction of the arrow.
- 2 Insert two AAA, LR03 or equivalent batteries, taking care to respect the polarities:
 - ◆ + on the battery against + in the battery compartment
 - ◆ - on the battery against - in the battery compartment
- 3 Replace the cover by sliding it back until it clicks into position.

- If you will not be using the remote control for a long time, remove the batteries to prevent corrosion.

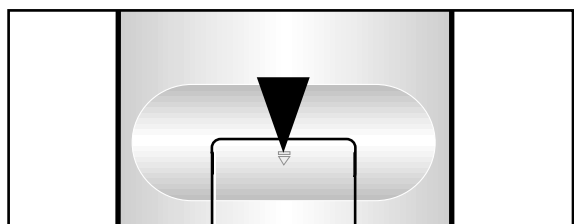

Connecting to an External Source

The auxiliary input can be used to take advantage of the sound quality of your mini-compact system when listening to other sources.

- Examples:**
- ◆ A television
 - ◆ A video disc player
 - ◆ A Hi-Fi stereo video cassette recorder

➤ To connect to the external source, the source must have an audio output. In addition, you need an RCA connection cable.

- Set the system to standby mode and disconnect it and the external source from the main socket.

- Connect the audio cable to the rear of the mini-compact system.

 
 
Connect the... To the connector marked...

Red jack R (right)
White jack L (left)

➤ For optimum sound quality, do not invert the right and left channels.


- Plug the system back into the main socket and press **STANDBY/ON** to switch it on.
- Select the AUX source by pressing **AUX**.
Result: **AUX** is displayed.
- Switch the external source on.
- Adjust the volume and balance as required:
◆ Volume ◆ Equalizer

Example: You can watch a film and take advantage of stereo sound provided that the original sound track is in stereo (as if you were in a cinema).

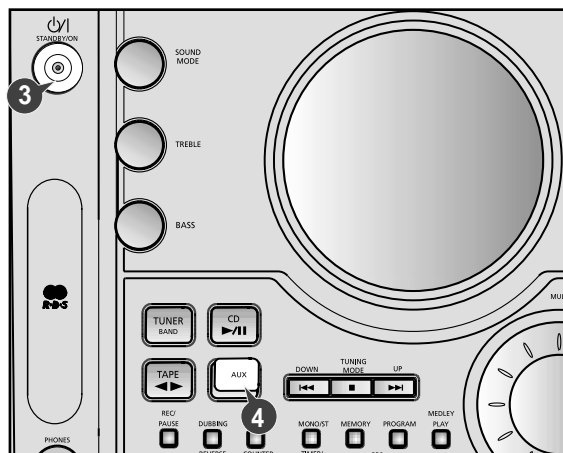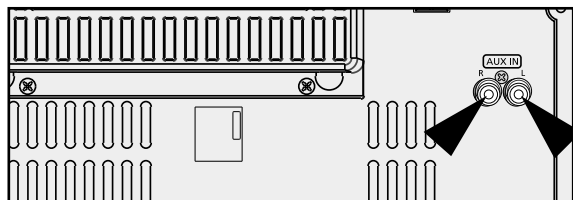


Multi Jog Function

 - ◆ Your mini-compact system has a Multi Jog Function.
- ◆ You can turn Multi Jog instead of pressing ◀◀ / ▶▶ in CD or Tuner function or setting the clock function etc.

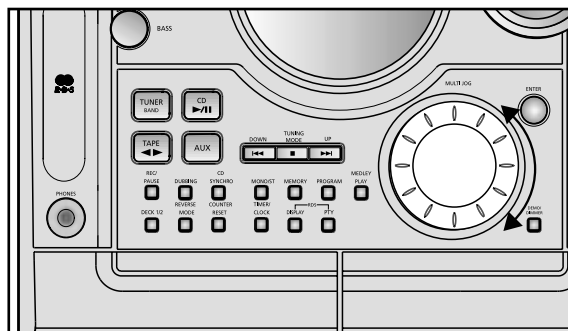

CD Digital Out Jack (option)

 This unit can output CD digital sound signals through this jack. Use an optical cable to connect digital audio equipment. (DAT deck, MD recorder, etc.). Remove the dust cap (1) from the CD DIGITAL OUT jack. Then, connect an optical cable plug to the CD DIGITAL OUT jack.

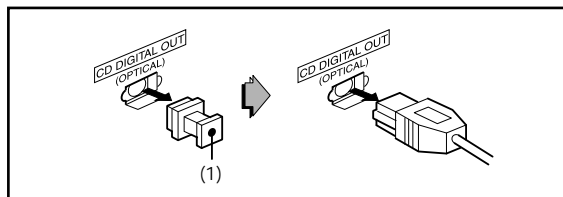


When the CD DIGITAL OUT jack is not being used Attach the supplied dust cap.

Connecting the Loudspeakers

GB

Connect the connecting jacks (4) to the back of mini-compact system.

 - ◆ Make sure the colors of the speaker terminals match the colors of the connecting jacks.
Blue(Subwoofer speakers)/Red(Main speakers).
- ◆ Make sure the polarities (+and -) are correct.

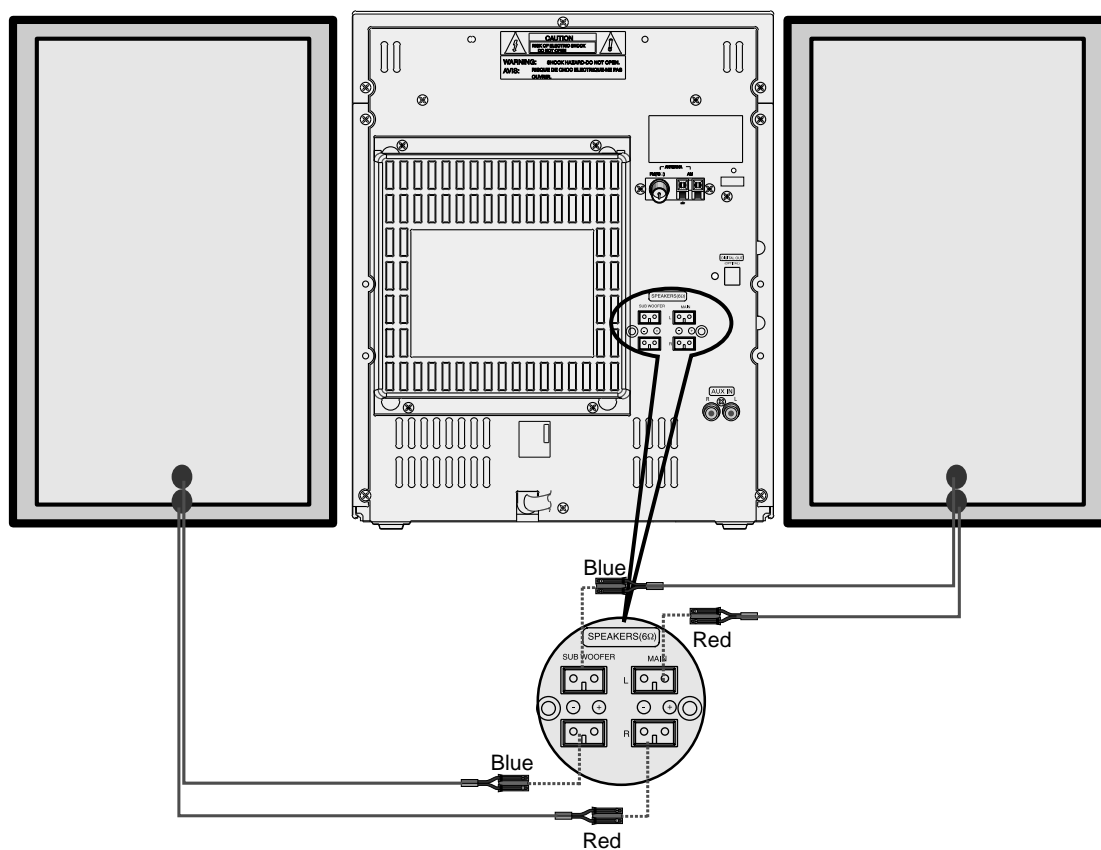

Directions in Installing Speaker

- ◆ Installation in a place near heating apparatus, under direct lay of light or with high humidity may cause performance degradation of the speaker.
- ◆ Do not install on the wall or on a high place of pole or other unstable place to prevent any safety accident caused by falling of the speaker.
- ◆ Do not take the speaker apart from TV or computer monitor.
The speaker near the TV or computer monitor may influence the quality of the screen display.

Connecting the AM (MW)/LW Aerial

 
 
GB

The AM aerial (for long and medium waves) can be:

- ◆ Placed on a stable surface
- ◆ Fixed to the wall (you must first remove the base)

The **AM** aerial connector terminals are located on the rear of the system and are marked **AM**.



- ☛ To avoid noise interference, check that the loudspeaker wires do not run close to the aerial wires.
Always keep them at least 2 inches (5 cm) away.

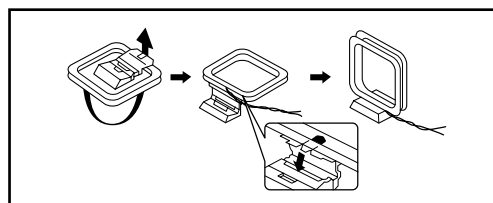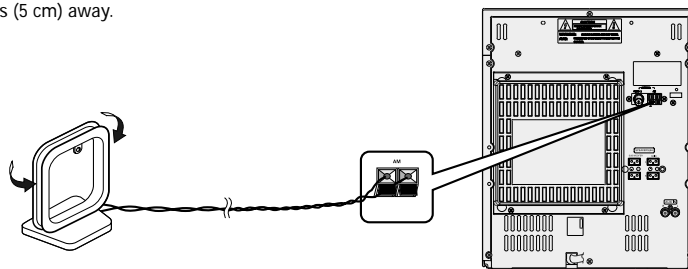

Connecting the FM Aerial

How to connect a COAXIAL TYPE aerial.

  - ◆ Connect a 75Ω antenna to the **FM** antenna terminal.
- ◆ Plug the connector on the **FM** aerial supplied into the coaxial socket (75Ω) marked **FM** on the rear of the system.
- ◆ Follow the instructions given on Page 16 to tune into a radio station, and determine the best position for the aerial.
- ◆ If reception is poor, you may need to install an outdoor aerial.
To do so, connect an outdoor **FM** aerial to the **FM** socket on the rear of the system using a 75Ω coaxial cable (not supplied).

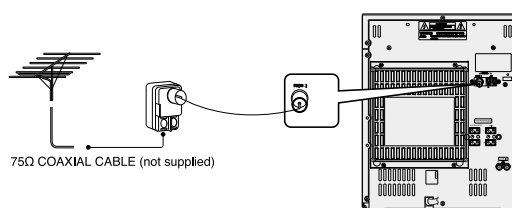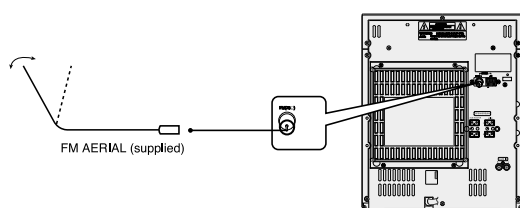


DEMO/DIMMER function



All functions available on the system can be viewed on the display and the display's brightness can be switched between "on" and "off".

 - 1 Press the **DEMO/DIMMER** button.
Result: All functions available on the system appear on the front panel display.
- Each of these are explained in detail in this guide. Please refer to the relevant section.
- 2 Press the **DEMO/DIMMER** button again.
Result: The Dimmer function is selected and the display darkens.
- 3 Press the **DEMO/DIMMER** button once again to brighten the front panel display.
- A display brightness control can only be performed while the system power is on.

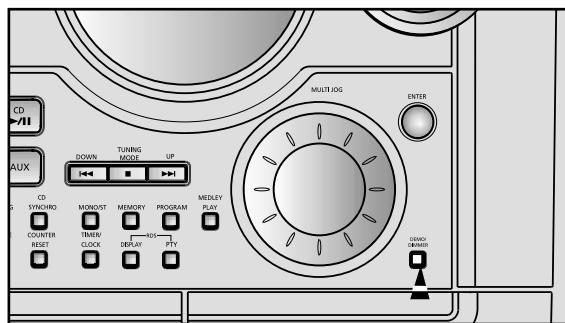

Setting the Clock

Your system is equipped with a clock which allows you to turn your system on and off automatically.

 
You should set the clock:

- ◆ When you first purchase the mini-compact system
- ◆ After a power failure
- ◆ After unplugging the unit

➤ For each step, you have a few seconds to set the required options. If you exceed this time, you must start again.

- 1 Switch the system on by pressing **STANDBY/ON**.
- 2 Press **TIMER/CLOCK** twice.
Result: **CLOCK** is displayed.
- 3 Press **ENTER**.
Result: The hour flashes.
- 4 To... Turn the MULTI JOG knob to the...
Increase the hours Right
Decrease the hours Left
- 5 When the correct hour is displayed, press **ENTER**.
Result: The minutes flash.
- 6 To... Turn the MULTI JOG knob to the...
Increase the minutes Right
Decrease the minutes Left
- 7 When the correct time is displayed, press **ENTER**.
Result: The clock starts and is displayed, even when the system is in standby mode.

- You can display the time, even when you are using another function, by pressing **TIMER/CLOCK** once.
- ◆ You can also use **◀▶** / **▶▶** buttons on the panel front or **TUNING/ALBUM** **▼** / **▲** on the remote control instead of **MULTI JOG** knob in step 4, 6.
- ◆ You can also use **PROGRAM/SET** button on the remote control instead of **ENTER** button in step 3, 5, 7.

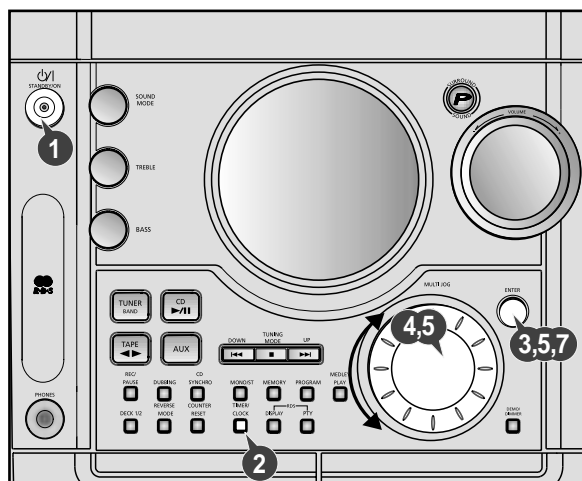

Loading and Changing Compact Discs

The CD disc changer can contain up to three 12 cm or 8 cm compact discs without using an adapter.

- ⚠ Never force the compact disc carousel when opening and closing the compartment.
Never press down or place objects on the carousel.
- Always treat your compact discs with care; refer, if necessary, to the section entitled "Precautions When Using Compact Discs" on page 24.


- 1 Switch the system on by pressing **STANDBY/ON**.
- 2 Press the **OPEN/CLOSE** (▲) button on the front panel.
Result: The compartment opens.
- 3 Place one or two discs in the front slots of the carousel, with the label on the discs facing upwards.
⚠ Check that the compact disc has been correctly inserted in the holder before closing the compartment.
- 4 If you wish to load a third compact disc, press the **DISC CHANGE** button on the front panel (or **DISC SKIP** on the remote control).
Result: The carousel rotates by 120°.
- 5 Close the compartment by pressing the **OPEN/CLOSE** (▲) button again.
➤ If you wish to start playing a disc directly, you can also proceed as follows.

To play...	Press...
Disc 1	CD (▶/) or Disc 1
Disc 2	Disc 2
Disc 3	Disc 3

Result: The compartment closes automatically and the disc selected starts playing.

- 6 To change or unload the compact disc changer, repeat Steps 2 to 5.

 - ⚠ Keep the compartment closed whenever you are not using it, to prevent dust from entering.
- You can load or unload compact discs when the radio, tape or auxiliary source function is selected.

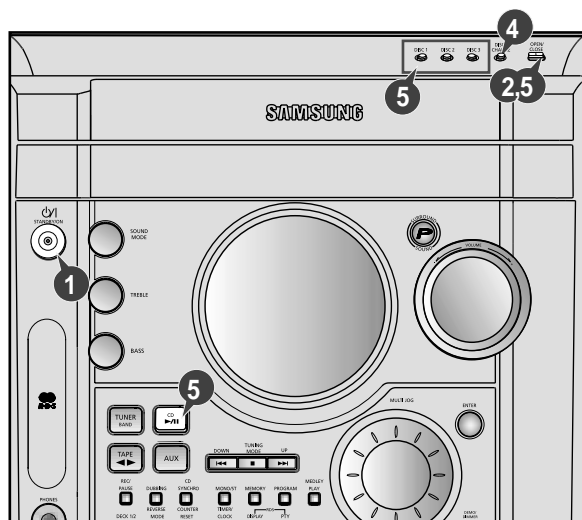


To replay the CD/MP3-CD

This is a player that enables the playback of audio CD, CD-R, CD-RW and MP3-CD and does not possess the function that saves MP3 files.

Do not use CDs of irregular shapes like heart or octagon shapes. The performance of the player may be degraded.


At least more than one CD should be inserted for playbacks.

- 1 Press the **STANDBY/ON** button to switch on the power.
- 2 Press the **CD** (▶/||) of the main unit to select the CD function.
- 3 Insert more than one CD or a MP3-CD.
- 4 Press the **CD** (▶/||) button of the main unit or the ▶/|| button of the remote control.
➤ If there are more than one CD or an MP3-CD inserted, replays are then processed in order.
♦ Your CD Player will take a few moments to scan through all the tracks recorded on a particular MP3-CD.
♦ The English name of the song may be indicated on the display only if directly downloaded from the PC or if the purchased MP3-CD is sorted according to titles(directory). (Other languages besides English may not be indicated.)
♦ The English name of the track may not be indicated depending on the characteristics of the MP3-CD.

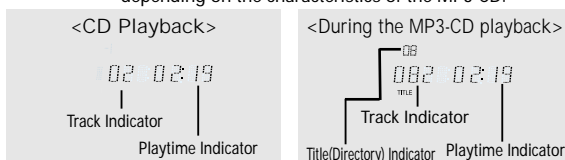 

- 5 Adjust the volume according to needs with the following procedures.
♦ Turn the **VOLUME** control of the main unit.
or
♦ Press the **VOLUME +** or **-** button of the remote control.
➤ The volume level can be adjust in 31 steps(VOL MIN,VOL 1-VOL 29,and VOL MAX).And press **ENTER** button to select the horizontal display or the vertical display in it.
- 6 If it is desired to pause while the playback is processing, press the **CD** (▶/||) button.
➤ Press the **CD** (▶/||) button once again to playback again.
- 7 To stop playback, press the ■ button.

 - A new disc may be inserted in the remaining two compartments excluding the CD which is being played back. Press the **Disc Changer** button to open the CD tray. The revolving part does not turn during playbacks.
- ♦ If there is not even one CD inserted in the CD tray, it is indicated as "NO DISC".
- ♦ If the **CD Repeat** function is not selected, 3 CDs are played back which automatically stops.

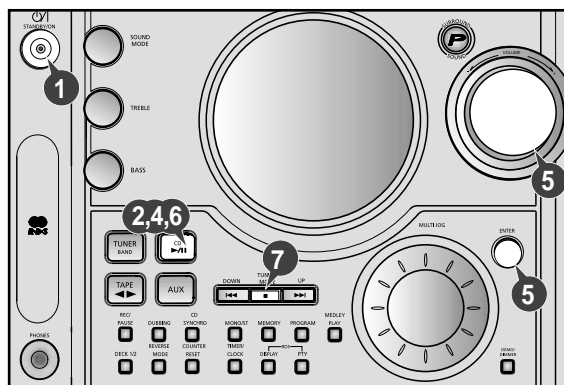

Selecting a CD in the Disc changer

GB

 


The CD function is automatically selected when Disc Skip is pushed.

To select a specific disc, press the corresponding DISC (1, 2, 3) button on the front panel or DISC SKIP on the remote control, until the required disc indicator flashes.

Result: All the discs will be played in turn, starting with the one selected.

- If you wish to play the current disc only, press CD REPEAT on the front panel one or more times, until **1 CD** is displayed.
- ♦ If you use the DISC (1, 2, 3) function when listening to the radio or to a tape, the system switches automatically to the CD mode.
- ♦ If the disc selected is not loaded, the next disc is played automatically.
- ♦ When the CD door is opened, if you hold the OPEN/CLOSE button over 5 seconds until "LOCK" is on the display, the CD door will be locked. In the case, you should hold the OPEN/CLOSE button once again until "UNLOCK" is on the display, the CD door will be unlocked.

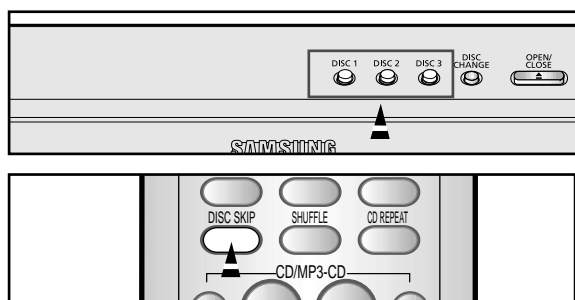


Selecting a Track

You can select the track you wish to listen to, either when the compact disc player is stopped or when a disc is playing.

To start playback at the beginning of the... Turn the MULTI JOG knob...

Next track	One notch to the right
Current track	One notch to the left
Previous track	Two notches to the left
Track of your choice	The appropriate number of notches to the right or to the left

 - ♦ You can also use the ◀◀ and ▶▶ buttons on the front panel, or the ◀◀ and ▶▶ buttons on the remote control to select a track.

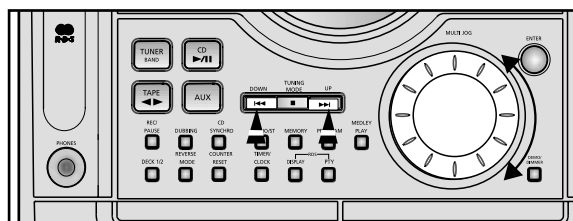

To select the MP3-CD title and track

 
The title and track of the MP3-CD desired to listen may be selected on stopping or during playbacks.

Main Unit

To move the title(Album),
Turn the Multi Jog Knob.

To move the track,
press the ◀◀, ▶▶ button.

- ♦ Moves the track within the title.
- ♦ If the ◀◀, ▶▶ button is pressed more than the number of tracks within the title, it moves to the next title.

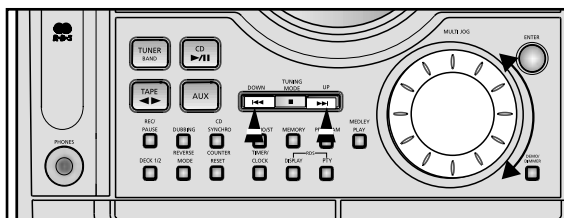

Remote Control

Press the **TUNING ALBUM** ∨ or ∧ button, the title moves. Press the ◀◀ or ▶▶ buttons, the track moves.



What is MP3?

MP3 means MPEG1 Layer 3, the global standard for audio signal compression technology. It uses digital compression technology to compress original sound data by up to 12 times without sound quality degradation.

File Compatibility

- ◆ The unit will playback files created in MP3 format (Mpeg1.Layer3) with *.mp3 as their extension.
- ◆ Playback will be impossible for the file of MP2 or 22KHz.
- ◆ ID3*tags can be shown on the display(only english).
- *An MP3 file can contain file information called "ID3 Tag " where its album name, performer, rack title, etc. are recorded.

How many MP3 files can a CD-R or CD-RW disc record?

The maximum capacity of one CD-R or CD-RW disc is 680MB.

 
Normally, one MP3 file has a capacity of 4MB, therefore approximately 170 files can be recorded on a single disc.

Regarding the playback of CD-R/RW

- ◆ In the case of an original CD-R(Recordable) recorded in audio CD format, CD-RW(Rewritable) and editing by the user, playback is processed on the respective completed status. (The player may not be played back according to the characteristics of the CD or recorded status.)
- ◆ The CD-RW is comparably less reflexive than CD which causes more time delay to read.

Playback sequence of titles and tracks

- ◆ In case of Window Explorer display.
- ◆ The arrows indicate playback sequence of titles and tracks.
- ◆ Tracks with jpg, wav or doc only are not audio files and therefore will be skipped.

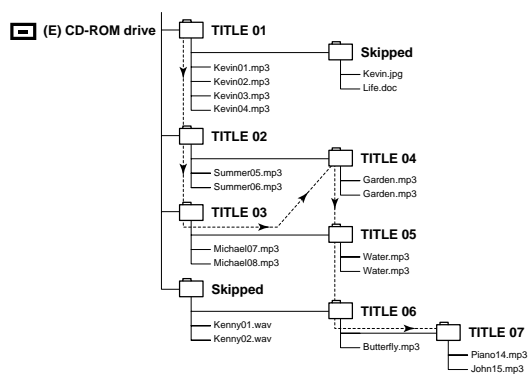


Searching for a Specific Music Passage on a CD

When listening to a compact disc, you can quickly search for a specific music passage on a track.

- It is recommended that you turn the volume down before using this function.

To search through the tracks...	Press and hold down...
Forwards	▶▶ for at least one second
Backwards	◀◀ for at least one second

 You can also press and hold down ◀◀ / ▶▶ on the front panel to auto search through the tracks.

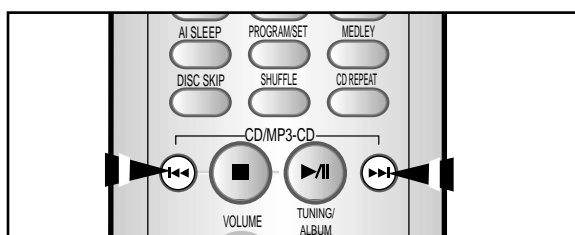


Shuffle Play Function

You can listen to the tracks on a compact disc in a different order each time, as the various tracks will be selected automatically in a random sequence.

- 1 Press the **SHUFFLE** button.
Result: The SHUFFLE (CD) or RANDOM (MP3-CD) indication appears and all the tracks are played in a random order. Both the track number and the playing time are displayed.
- 2 When playing tracks in a random order, you can:
 - ◆ Move on to the next track (selected at random) by pressing ◀◀/▶▶ or turning **MULTI JOG** one notch to the left or right.
 - ◆ Search quickly for a specific point in the current track by holding ◀◀/▶▶ more than one second.
- 3 When you have finished the random playback, press ■ or press the **SHUFFLE** button again.

 - Repeat and CD Synchro function are not available in Shuffle playing mode.

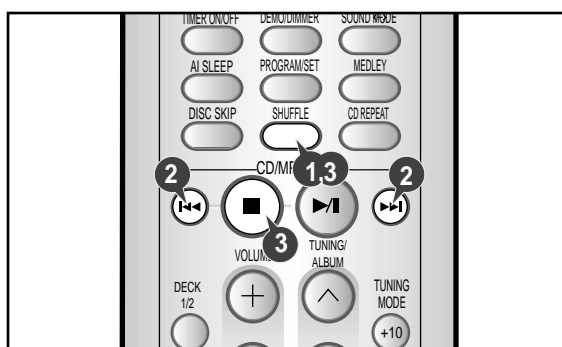


Medley Play

(This function is only available during playback of a CD.)



You can select "MEDLEY ON" and "MEDLEY OFF" during playback of a CD.

 - 1 Press the **MEDLEY PLAY** button once.
Result: "MEDLEY" is displayed.
◆ The interval time between the tracks can be shorten.
- 2 Press the **MEDLEY PLAY** button again.
◆ Cancel this function, return to normal playback.


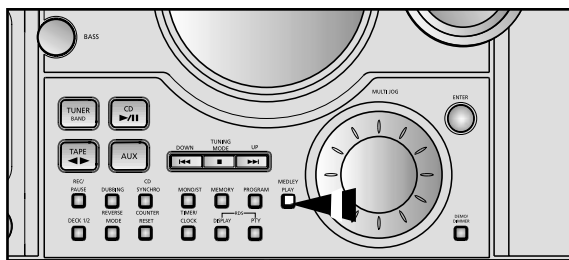


Function to skip through 10 tracks at a time

Press the +10 button briefly while playing back a CD and MP3-CD. The track 10 tracks after the current one will then be played back.

Example: If you want to select track 43 during playback of track 5, press the +10 button four times, and then press the **▶▶** button three times.

  5 → 10 → 20 → 30 → 40 → 41 → 42 → 43

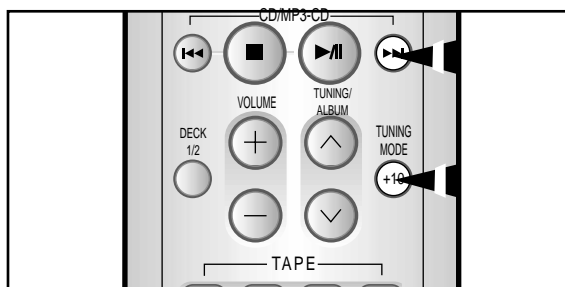

Repeating One or All Tracks on the Compact Discs

You can repeat indefinitely:

- ◆ A specific track on a compact disc.
- ◆ All tracks on the compact disc selected.
- ◆ All discs loaded in the carrousel

- 1 To repeat... Press **CD REPEAT** on the Remote Control or more times until...

The current track indefinitely **REPEAT 1** is displayed
The selected disc **REPEAT 1 CD** is displayed
All discs loaded **REPEAT ALL CD** is displayed

- 2 When you wish to stop the Repeat function, press **CD REPEAT** until **ALL CD** or **1 CD** is displayed, or press **■**.

 
 


Last Memory Function

(This function is only available during playback of MP3-CD.)

When MP3-CD playback is selected again after your CD player has been stopped or turned off, this function allows playback from the start of the track that you last listened to.

- ◆ Press the **PROGRAM** button while your MP3-CD is being played . The **LAST ON** and **LAST OFF** may be repeatedly selected.

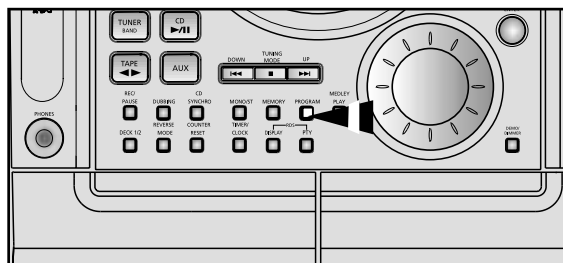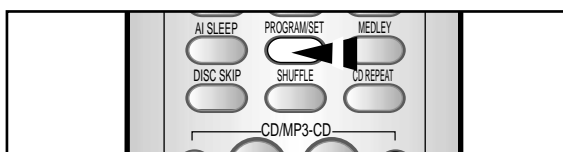

Programming the Order of CD Playback

(This function is not available during playback of an MP3-CD.)

You can decide:

- ◆ The order in which you listen to the tracks on the discs loaded
- ◆ Which tracks you do not wish to listen to
- ◆ You can program up to 24 tracks.
- ◆ You must stop the compact disc player before selecting the tracks.
- ◆ This feature can be combined with the Repeat function.

1 If the CD function is selected, stop the player by pressing ■.

2 Load the selected CDs.

3 Press **PROGRAM**.

Result: The following indications are displayed:

PROGRAM
PR 1 01

(01 = Program No., PR 1 = Program Disc No.1,2,3, -- = Track no. on the disc)

4 If necessary, select the disc containing the required track by pressing the corresponding **DISC (1, 2, 3)** button.

5 Select the required track by turning the **MULTI JOG** knob:

- ◆ To the left to move back through the tracks
- ◆ To the right to move forward through the tracks

6 Press **PROGRAM** to confirm your selection.

Result: The selection is stored and PR 1 02 -- is displayed.

7 To select other tracks, repeat Steps 4 to 6.

8 Press **CD (▶/||)** to listen to the track selection in the order programmed.


9 **To...** **Turn the MULTI JOG knob...**

Listen to the current track again	One notch to the left
Listen to the previous track	Two notches to the left
Listen to the next track	One notch to the right
Skip forwards or backwards one	The appropriate number of
or more tracks	notches to the right or to the left

10 To cancel the selection, press ■.

- ◆ Once if the compact disc player is stopped
- Result: **PRGM** is no longer displayed.

 - ◆ If you open the compartment, the selection is cancelled.
- ◆ If you select the number of a disc which is not loaded or a track which does not exist on the CD, the selection skips to the next programmed track.
- ◆ You can also use the **◀◀ / ▶▶** buttons to select the required tracks in step 5, 9.
- ◆ You can also use the **PROGRAM/SET** button on the remote control instead of **PROGRAM** button on the front panel in step 3, 6.

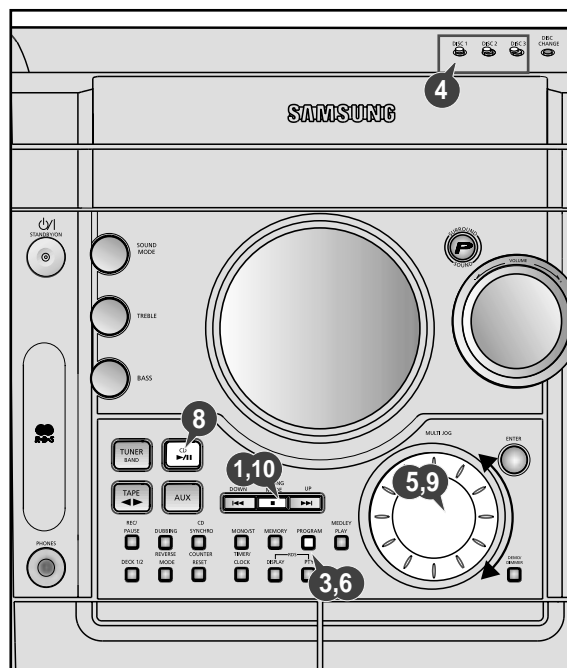



GB

Checking or Changing Programmed CD Tracks

GB

 You can check or change your selection of tracks at any time.

 - 1 Press **■** once if you have started listening to the selection.
- 2 Press **PROGRAM**.
Result: The following indications are displayed:

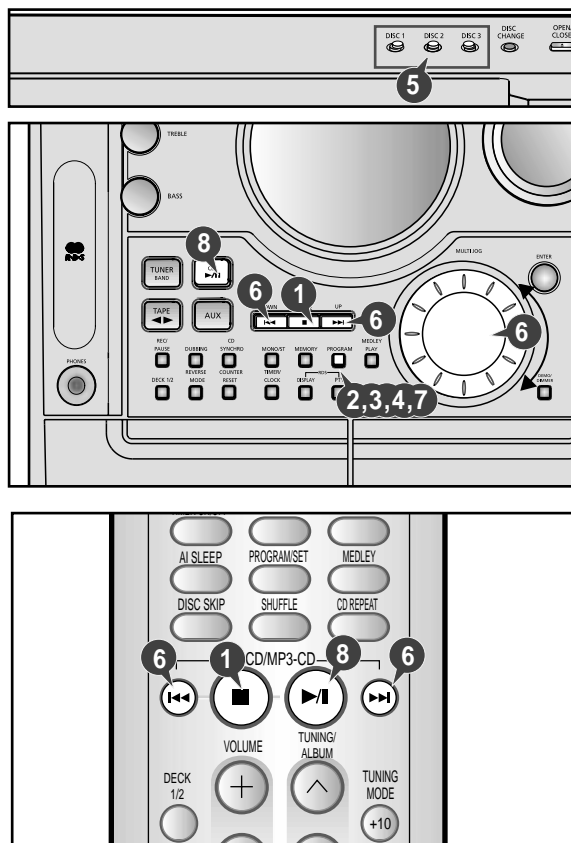(CH = Check, 01=Program No, CH 1 = Disc No.1,2,3, -- = Track No on the disc)
➤ If you have already programmed 24 tracks, **CH** is displayed instead of **PR** when you press **PROGRAM**.
- 3 Press **PROGRAM** again.
Result: The first track selected is displayed, together with the letter **CH** (Change).
- 4 Press **PROGRAM** once or more times until the track to be changed is displayed.
- 5 If necessary, press the corresponding **Disc (1, 2, 3)** button to change discs.
- 6 Press **⏮** and **⏭** or turn **MULTI JOG** to select a different track.
- 7 Press **PROGRAM** to confirm your change.
- 8 Press **CD (▶/⏮)** to start listening to the selection.
Result: The first track selected is played.



Searching for and Storing the Radio Stations

You can store up to:


- ◆ 15 FM stations
- ◆ 8 MW stations
- ◆ 7 LW stations

- 1 Switch the system on by pressing **STANDBY/ON**.
- 2 Select the **TUNER** function by pressing **TUNER**.
- 3 Select the required frequency band by pressing **TUNER (BAND)** again on the front panel or **TUNER (BAND)** on the remote control.
Result: The appropriate indication is displayed:

◆ FM	Frequency Modulation
◆ MW	Medium Wave
◆ LW	Long Wave
- 4 To search for a station... Press **TUNING MODE**

Manually	Once or more times until MANUAL is displayed.
Automatically	Once or more times until AUTO is displayed.
- 5 Select the station to be stored by:
 ◆ Turning the **MULTI JOG** knob to the right or to the left to increase or decrease the frequency respectively
 or
 ◆ Pressing **TUNING** **∨** or **∧** on the remote control
 ◆ To scroll through the frequencies faster when searching manually, hold down the **TUNING Down** or **Up** buttons.
 ◆ The automatic search procedure may stop on a frequency that does not correspond to a radio station. If this happens, use the manual search mode.
- 6 Adjust the volume by:
 ◆ Turning the **VOLUME** knob on the front panel
 or
 ◆ Pressing the **VOLUME +** or **-** buttons on the remote control
- 7 Select the FM stereo or mono mode by pressing **MONO/ST**.
- 8 If you do not want to store the radio station found, revert to Step 4 and search for another station.
 Otherwise:
 - a Press **MEMORY**.
Result: The **PRGM** is displayed for a few seconds.
 - b Press **TUNING Down** and **Up** to assign a program number between 1 and 15.
 - c Press **MEMORY** to store the radio station.
Result: **PRGM** is no longer flashed and the station is stored.
- 9 To store any other radio frequencies required, repeat Steps 3 to 8.

 - ◆ The **PROGRAM** function can be used to assign a new station to an existing program number.
- ◆ You can also use **PROGRAM/SET** button on the remote control to instead of **MEMORY** button in step 8.

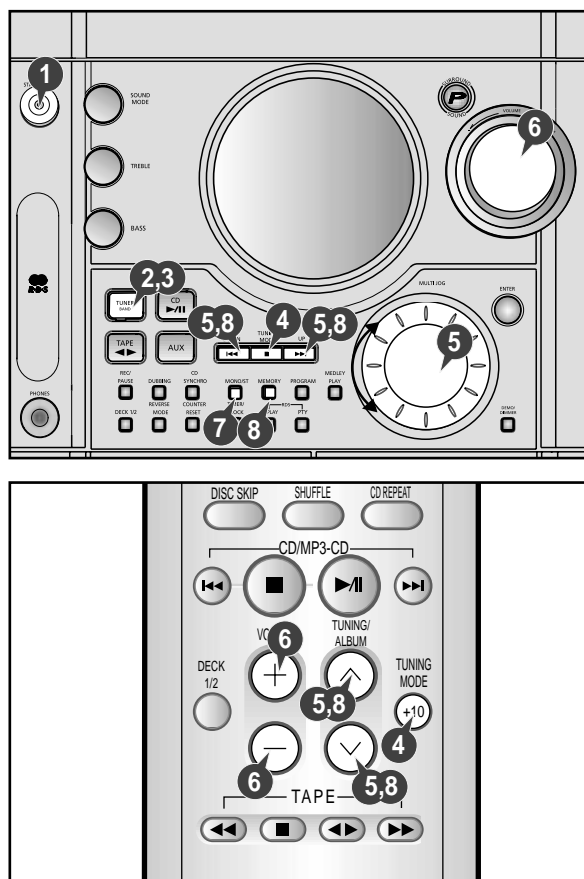


In Tuner mode

- ◆ In manual tuning mode, you can use **MULTI JOG** or **◀▶** button on the panel front to manual search a radio station.
- ◆ During Tuner auto searching, press **■** button to stop auto searching.
- ◆ In Preset tuning mode, you can use **MULTI JOG** or **◀▶** button on the panel front to search a stored radio station.

Selecting a Stored Station

You can listen to a stored radio station as follows:

 
- 1 Switch the system on by pressing **STANDBY/ON**.
- 2 Select the **TUNER** function by pressing **TUNER** on remote control.
- 3 Select the required frequency band by pressing **TUNER (BAND)** on the remote control or **TUNER (BAND)** again on the front panel.
- 4 Press the **TUNING MODE** button on the front panel of the unit, or the **TUNING MODE** button on the remote control until "**PRESET**" is displayed.
- 5 Turning **MULTI JOG** on the front panel left or right until the desired station is found or press **◀▶** to select the desired station.
or
Select the desired station by pressing the station number stored, using the **TUNING ALBUM** **∨** or **∧** button on the remote control.
Result: The desired station is now received.

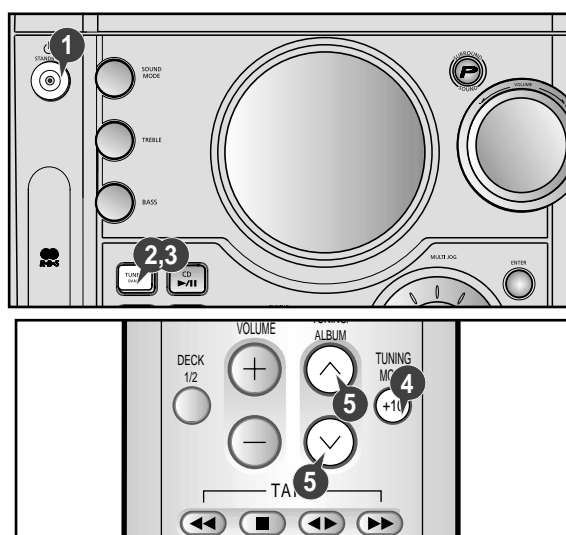

Improving Radio Reception

You can improve the quality of radio reception by:

 - ◆ Rotating the FM or AM(MW) aerial
 - ◆ Testing the positions of the FM and AM(MW) aerials before fixing them permanently
- If reception from a specific FM radio station is poor, press **MONO/ST.** to switch from stereo mode to mono. The quality of the sound will be improved.

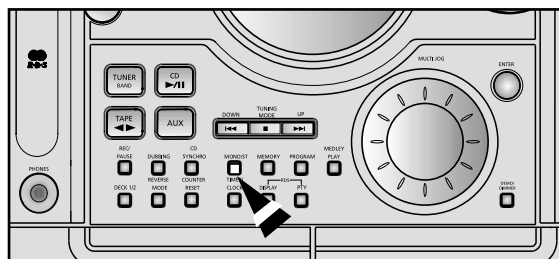

About RDS broadcasting



This unit has the RDS (Radio Data System) function, which enables for the various information such as broadcasting station, radio text, time and 30 types of programs (News, Rock, Classic, etc.) to be received from the FM RDS station together with normal radio signal.

 
- 1 Press the **ECO/STANDBY/ON** button.
- 2 Receive the **FM** radio.
 - ◆ See the radio receiving method on the **page 16**.
 - ◆ **FM** and frequency are shown on the display
 - ◆ If the received station transfers the RDS information, 'RDS' appears automatically on the display.
- 3 Press the **RDS DISPLAY** button to select the desired RDS mode.
 - ◆ Whenever the button is pressed, RDS mode changes as follows.

➤ PS NAME → RT → CT → Current **FM** frequency

◆ The RDS function is available only in **FM** broadcasting.

Description on RDS function

1. **PTY** (Program Type) : Displays the type of programme currently being broadcast
2. **PS NAME** (Program Service Name) : Indicates the name of broadcasting station and is composed of 8 characters.
3. **RT** (Radio Text) : Decodes the text broadcast by a station (if any) and is composed of maximum 64 characters.
4. **CT** (Clock Time) : Decodes the real time clock from the **FM** frequency.
 - Some stations may not transmit PTY, RT or CT information therefore this may not be displayed in all cases.
5. **TA** (Traffic Announcement) : When this symbol flashes it shows that the traffic announcement is in progress.

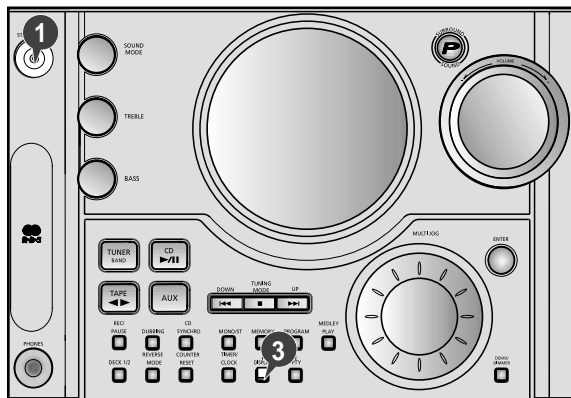

About RDS DISPLAY function

 
About "PS NAME" MODE

➤ Displays the name of broadcasting station.

Press the **RDS DISPLAY** button to select the PS NAME.

- ◆ **"PS NAME"** appears on the display.
- ◆ If the PS information is being received, the PS name (BBC, AFO, NDR, etc.) is shown on the display.
- ◆ If the PS information isn't received, the original **FM** frequency is shown.

◆ Even though no **RDS DISPLAY** button is pressed, the reception of PS information ensures the PS name is displayed.

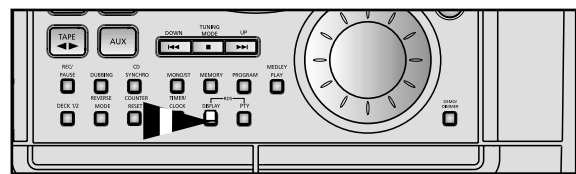


About 'RT' MODE

➤ Displays the character transmitted from the broadcasting station.

Press the **RDS DISPLAY** button to select the RT MODE.

 - ◆ **"RT"** appears on the display.
- ◆ If the RT information is being received, the received information is shown on the display.
- ◆ If the RT information isn't received, the **"NO RT"** is shown on the display.

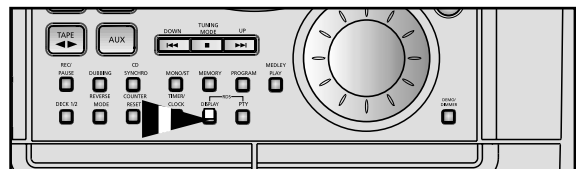


About CT(Clock Time)

➤ Sets the time of RDS clock.

To select the CT time, set the RDS Display button to CT MODE.

 - ◆ The CT information will take up to 2 minutes to be decoded therefore the clock isn't displayed immediately.
- ◆ If there is no received CT information, **"NO CT"** is displayed.

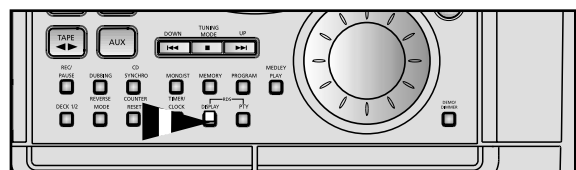

PTY (Program Type) indication and PTY-SEARCH function


- ◆ The PTY information is composed of an identification symbol, which helps the **FM** radio to recognize the program type of each **FM** station.
- ◆ The 30 PTY modes are shown on the display by pressing the PTY button.

Display	Program Type
NEWS	• News including an announced opinion and report
AFFAIRS	• Several matters including a current incident, documentary, discussion and analysis.
INFO	• Information including weights and measures, returns and forecast, matters interesting the customer, medical information, etc.
SPORT	• Sports
EDUCATE	• Education
DRAMA	• Drama-Radio serial, etc.
CULTURE	• Culture-National or local culture including the religious problem, social science, language, theater, etc.
SCIENCE	• Natural science and technology
VARIED	• Others-Speech, amusing program (quiz, game), interview, comedy and satirical play, etc.
POP M	• Pop Music
ROCK M	• Rock Music
M.O.R.M	• M.O.R- Comfortable music, occasionally vocal or piece
LIGHT M	• Light classical music- Classical music and instrumental and chorus music
CLASSICS	• Heavy classical music-Orchestra music, symphony, chamber music and opera
OTHER M	• Other music - Jazz, R&B country music
WEATHER	• Weather
FINANCE	• Finance
CHILDREN	• Children's programmes
SOCIAL	• Social affairs
RELIGION	• Religion
PHONE IN	• Phone in
TRAVEL	• Travel
LEISURE	• Leisure
JAZZ	• Jazz Music
COUNTRY	• Country Music
NATION M	• National Music
OLDIES	• Oldies Music
FOLK M	• Folk Music
DOCUMENT	• Documentary
TEST	• Alarm Test

About PTY-SEARCH

- 1 Tuned to an **FM** station broadcasting a **PTY MODE**.
 - ◆ See the **FM** receiving method on the **page 16**.
 - ◆ If the received station is transmitting the RDS information, "RDS" lights up.
- 2 Press the **PTY** button.
 - ◆ The **PTY MODE**(NEWS, AFFAIRS, etc) appears on the display.
 - ◆ Press the **TUNING Down** or **Up** button to select the desired **PTY MODE**.

 - If the station is transmitting no **PTY** information, '**NO PTY**' shows on the display.
- When the **PTY MODE** is selected(The **PTY MODE** is shown in the display), press the **PTY** button once again to convert into **PTY-SEARCH MODE** and auto-search the station sequentially.
- If a station is found broadcasting required **PTY MODE** then the search station and the stop is selected.
- If the **PTY MODE** isn't found, it is returned to the original station frequency at beginning the **PTY SEARCH** and auto-search and **PTY SEARCH** are suspended.

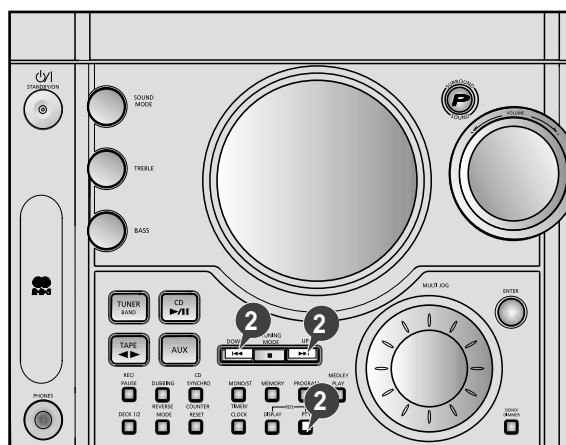

Listening to a Cassette

GB



- Always treat your cassettes with care; refer, if necessary, to the section entitled **"Precautions When Using Audio Cassettes"** on page 24.

- 1 Switch the system on by pressing the **STANDBY/ON** button.
- 2 Select the TAPE function by pressing **TAPE** on the front panel.
- 3 Open either cassette deck 1 or 2 by pushing and releasing the deck cover where **PUSH EJECT** (▲) is written.
- 4 Insert the pre-recorded cassette with the open edge of the tape facing downward.
- 5 Close the deck by pushing on it until it clicks into place.
Result: Depending on the deck selected, the 1 or 2 indication is displayed in front of the counter number.
- 6 If you have inserted two cassettes, press **DECK 1/2** on the front panel or directly the **DECK 1/2** button on the remote control to select the cassette to be played.
Result: Depending on the deck selected, the TAPE 1 or TAPE 2 indication is displayed.
- 7 **To listen to... Press ...**
Side ATAPE (◀▶)....once(DECK 1 and DECK 2)
Side BTAPE (◀▶)....twice(DECK 2 only)
Result: The cassette starts playing.
- 8 When the cassette is stopped, select one of the following functions as required or on the remote control.


Main Unit

To...	Press...
Rewind the cassette	⏮
Fast-forward the cassette	⏭

Remote Control

To...	Press ...
Rewind the cassette	⏮
Fast-forward the cassette	⏭

 - 9 **To... Press ...**
Stop the playback■

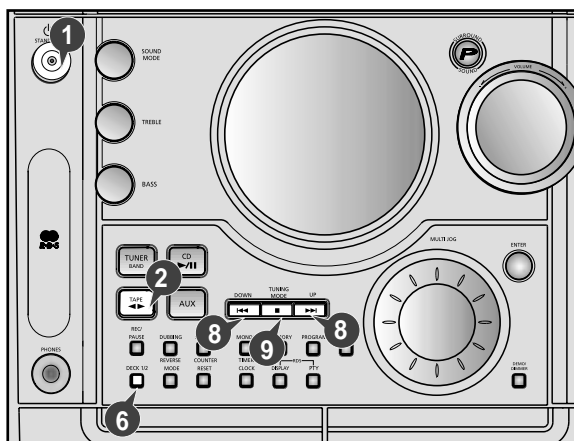

CD Synchro Record Feature

 
(This function is not available during playback of an MP3-CD.)

You can record a compact disc on a cassette in two different ways:

- ◆ Synchronised recording
- ◆ Direct recording

This feature enables you to synchronize the start of the recording with the start of the disc or track of your choice.

- 1 Switch the system on by pressing **STANDBY/ON**.
- 2 Insert a blank cassette in Deck 2.
- 3 Select the CD function by pressing **CD** on the front panel.
- 4 Load a compact disc.
- 5 Select the required disc.
- 6 Select the required track and press **CD SYNCHRO** or press **CD SYNCHRO** directly to start recording at the beginning of the disc.
Result: **REC** and **SYNC** are displayed and recording starts.
- 7 To stop recording, press ■.

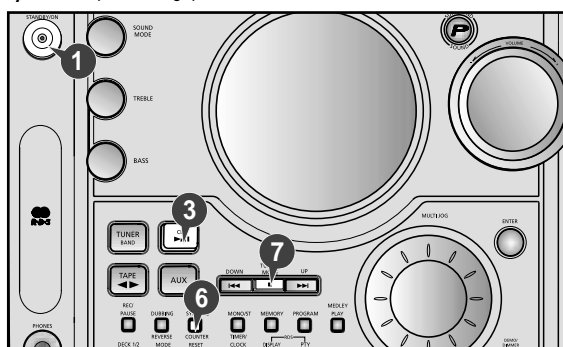


Recording a Compact Disc

The direct recording mode enables you to start recording with any track on the compact disc.

- ◆ You can only record on cassettes in Deck 2.
- ◆ You do not need to adjust the volume, as it has no effect on the recording.

- 1 Switch your system on by pressing **STANDBY/ON**.
- 2 Insert a blank cassette in Deck 2.
- 3 Select the **CD** function by pressing **CD** on the front panel.
- 4 Load the compact disc.
- 5 Select the required disc.
- 6 Select the required track on the compact disc and press ▶/|| on the front panel or ▶/|| on the remote control to set the compact disc player to Pause mode.
- 7 Press the **REC/PAUSE**.
Result: **REC** is displayed.
- 8 Press the ▶/|| to start playing the track.
Result: The track is recorded on the cassette.
- 9 To stop recording, press ■.

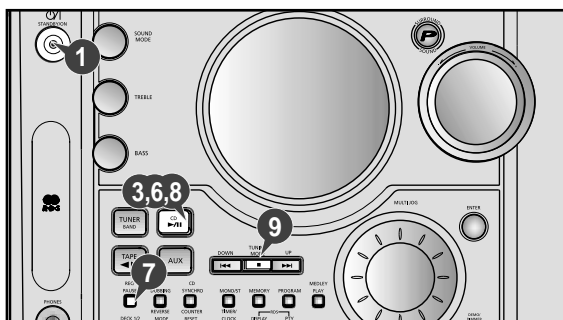 


Recording a Radio Program

You can record a radio program of your choice.

- ◆ You can only record on cassettes in Deck 2.
- ◆ You do not need to adjust the volume, as it has no effect on the recording.

 - 1 Switch the system on by pressing **STANDBY/ON**.
- 2 Insert a blank cassette in Deck 2.
- 3 Select the **TUNER** function by pressing **TUNER**.
- 4 Select the radio station that you wish to record by pressing **Tuning** or on the remote control or by press the **Tuning Down** or **Up** on the front panel.
- 5 Press **REC/PAUSE**.
Result: **REC** is displayed in red and recording starts.
- 6 To stop recording, press .

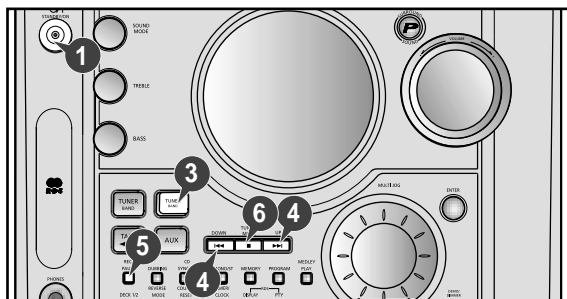

Copying a Cassette (Dubbing)

 
You can copy a cassette from Deck 1 to Deck 2.

- ◆ Normal speed dubbing in selecting Tape function mode.
- ◆ You do not need to adjust the volume, as it has no effect on the recording.
- ◆ Take care not to insert the tape to be copied in Deck 2, as it will be erased when you start recording.

- 1 Switch your system on by pressing **STANDBY/ON**.
- 2 Insert a blank cassette in Deck 2.
- 3 Insert the tape to be copied in Deck 1.
- 4 **To copy a cassette at... Press...**
Normal speed **DUBBING**

Result: The appropriate indications are displayed and the cassette in Deck 1 is copied to the cassette in Deck 2.

- 5 To stop dubbing, press .

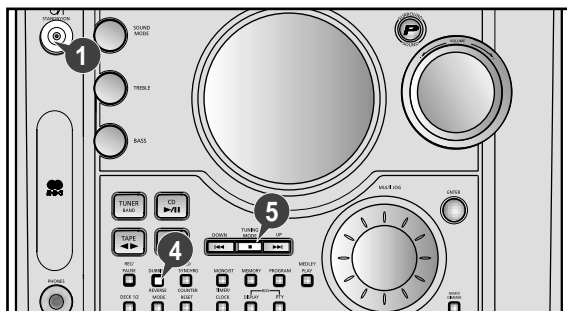

Selecting the Cassette Playback Mode

Your mini-compact system has three cassette playback modes which enable you to listen to both sides of a cassette automatically.

Press **REVERSE MODE** until the appropriate symbol is displayed.



When the display indicates... The mini-compact system plays back...



 
One side of the selected cassette and then stops.



One side of the cassette. The other side of the cassette and then stops.



Both sides of the cassette indefinitely until you press stop.

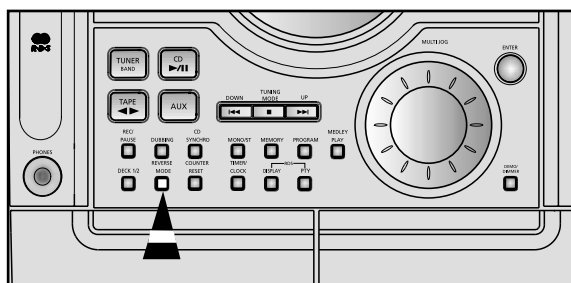


Tape Counter

When playing a cassette in one of the cassette decks, a counter is displayed to enable you to take note of the counter value at the start of each track to start playback at the beginning of the track to which you wish to listen.

- Before starting to record a cassette for which you wish to take note of the counter values at the beginning of each track, reset the counter by pressing **COUNTER RESET**.

 
- Each cassette deck has a separate counter.

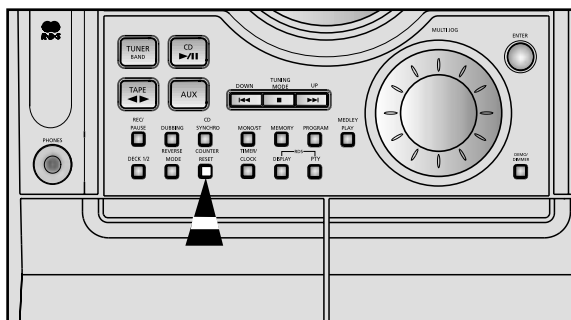

Mute Function

You can turn the sound off temporarily on your system.
Example: You wish to answer a telephone call.

 - 1 Press **MUTE**.
- 2 To switch the sound back on (at the same volume as before), press **MUTE** again or the **VOLUME** buttons.

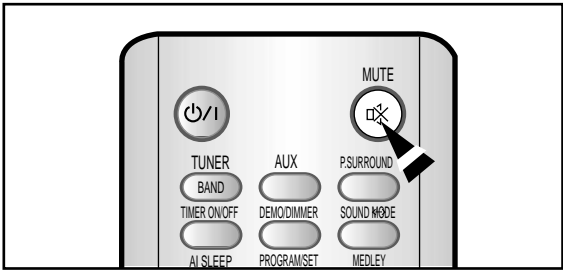


Selecting Sound Mode

Your mini-compact system is equipped with a preset equalizer that allows you to choose the most appropriate balance between treble and bass frequencies, according to the type of music you are listening to.

This model provides D.S.P modes so that you can enjoy virtually original sound.

Turn **SOUND MODE** on the front panel or Press **SOUND MODE** on the remote control until the required option is selected.

To obtain a...	Select...
Normal balance (linear)	PASS
Balance suitable for pop music	POP
Balance suitable for rock music	ROCK
Balance suitable for classic music	CLASSIC
Balance suitable for hall	HALL
Balance suitable for live	LIVE
Balance suitable for cinema	CINEMA

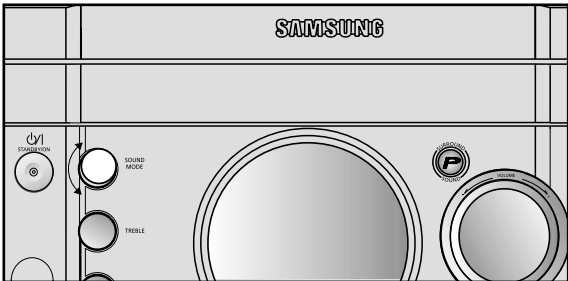 


Power Surround/Power Sound Function

Your mini-compact system is equipped with the function of Power Surround/Power Sound.

The Power Surround replaces conventional stereo sound with a wider and more true-to-life sound. It creates the feeling of being right at the centre of the music and being surrounded by total music sound.
The function of Power Sound amplifies bass and improves high key or bass twice as much for you to appreciate powerful real sound.

 - Press P.SURROUND/P.SOUND button on the front panel until the required option is selected. Each time the P. SURROUND/ P.SOUND button is pressed, "**P.SOUND,P.SURR ,OFF**" is selected or cancelled in this order.

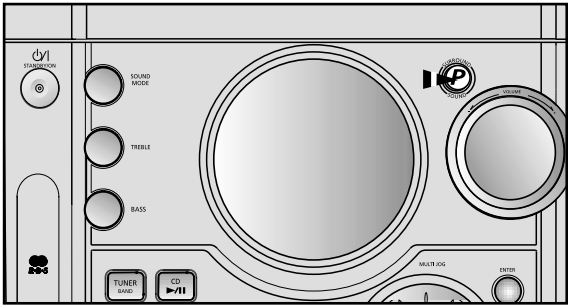




Setting the System to Switch off Automatically

While listening to a compact disc or a cassette, you can set the system to switch off automatically

Example: You wish to go to sleep to music.

 
- 1 Press **AI SLEEP**.
Result: playback starts and the following indications are displayed:
90 MIN
- 2 Press **AI SLEEP** once or more times to indicate how long the system should continue playing before it switches off:
 (AI SLEEP) → 90 MIN → 60 MIN → 45 MIN
 OFF ← 15 MIN ← 30 MIN ←
 ➤ At any time, you can:
 ♦ Check the remaining time by pressing **AI SLEEP**
 ♦ Change the remaining time by repeating Steps 1 and 2
- 3 Press **AI SLEEP** once or more times until **AI SLEEP** is displayed.
Result: The system will automatically switch off at the end of the disc or cassette.
- 4 To cancel SLEEP function, press **AI SLEEP** once or more times until **OFF** is display.

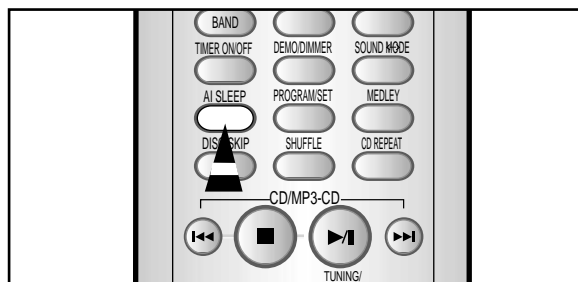

Treble Level Function

Treble Control function stresses high tones providing thudding sound effects.

 
- 1 Turn **Treble** knob on the front panel to select from **TRE -8** to **TRE +8**, total 9 steps.
- 2 You can select the level of high tones you desire.

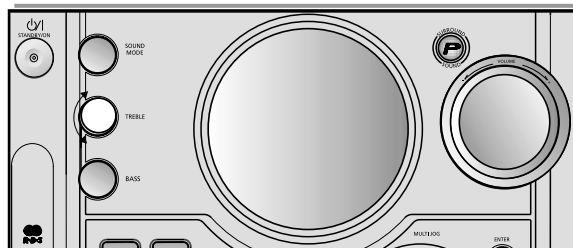

BASS Level Function

BASS function stresses low tones providing thudding sound effects.

 - 1 Turn **BASS** knob on the front panel to select from **BASS -8** to **BASS +8**, total 9 steps.
- 2 You can select the level of low tones you desire.

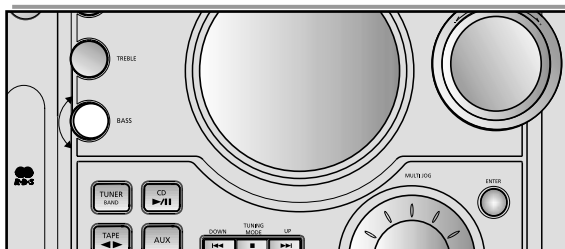


Connecting Headphones

You can connect a set of headphones to your mini-compact system so that you can listen to music or radio programmers without disturbing other people in the room. The headphones must have a 3.5Ø jack or an appropriate adapter.

Connect the headphones to the **PHONES** jack on the front panel.


Result: The loudspeakers are no longer used to output the sound.

 ➤ Prolonged use of headphones at a high volume may damage your hearing.

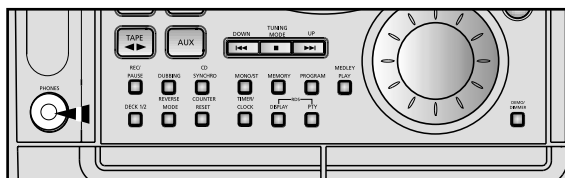


Safety Precautions


The following diagrams illustrate the precautions to be taken when using or moving your mini-compact system.

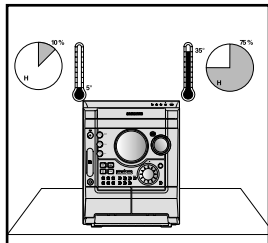 

 
Ambient operating conditions:
Ambient temperature 5°C-35°C
Humidity 10-75%

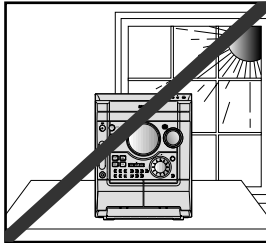

 
Do not expose the unit to direct sun radiation or other heat sources. This could lead to overheating and malfunction of the unit.

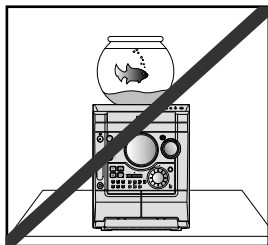

 
Do not place potted plants or vases on top of the unit. Moisture entering the unit could lead to dangerous electric shock and can cause equipment damage. In such events immediately disconnect the main plug from the socket.

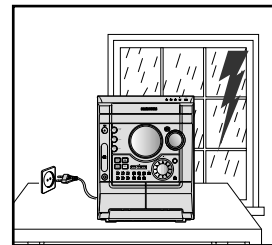

 
During thunderstorms, disconnect the main plug from the socket. Main voltage peaks due to lightning could damage the unit.

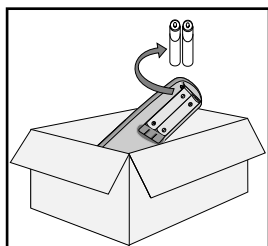

 
Remove the batteries from the remote control, if not used for any extended period. Leaking batteries can cause serious damage to the remote control.

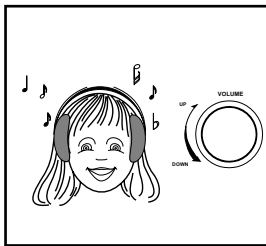

 When using headphones, take care not to listen at excessive volumes. Extended use of headphones at high volumes will lead to hearing damage.

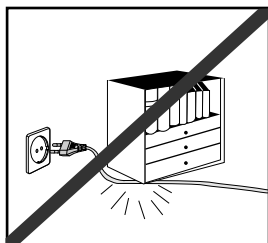

 Do not place heavy items on the main lead. Main cable damage can lead to damage of the equipment (fire hazard) and can cause electric shock.

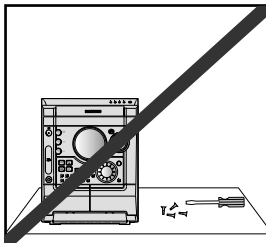

Do not remove any equipment panels. The inside of the unit contains live components, which cause electric shock.

Cleaning Your Mini-Compact System

GB

To obtain the best possible results from your mini-compact system, you must clean the following elements regularly:

- ◆ The outer casing
- ◆ The compact disc player
- ◆ The cassette players (heads, rollers and drive capstans)
- ✎ Always unplug the system from the wall outlet:
 - ◆ Before cleaning it
 - ◆ If you are not going to be using it for a long time

Outer Casing

 
Clean the outer casing regularly using a soft cloth and a light detergent. Do not use abrasive powders, liquids or aerosol cleaners. Never let any liquids get into the system.

Compact Disc Player

- 1 Before playing a compact disc, clean it with a special CD cleaning agent. Do not use the same cleaning agents as for vinyl LP records. Carefully wipe the disc from the centre outward.
- 2 Regularly clean the player with a special cleaning disc (available from your local dealer).

Tape Decks

- 1 Press **PUSH EJECT** (▲) to open the cassette deck.
- 2 Use a cotton bud and a special cassette cleaning agent to clean the:
 - ◆ Head (1)
 - ◆ Rollers (2)
 - ◆ Drive capstans (3)

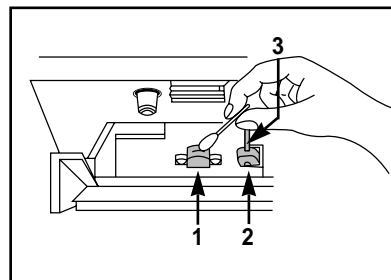

- ✎ If you will not be using the remote control for a long time, remove the batteries to prevent corrosion.
- ◆ Although your system is very hard-wearing, it should not be used in an excessively dusty environment or subjected to shocks or extreme heat (close to heating appliances or in direct sunlight, etc.).
- ◆ If the unit emits an unpleasant odor when in use, unplug it from the main supply and contact the after-sales service.

Precautions When Using Compact Discs

 
 
 


- ◆ Handle your compact discs with care. Always hold them by the edges to avoid leaving fingerprints on the shiny surface.
- ◆ When you have finished playing a compact disc, always put it back in its case.
- ◆ Do not fix paper or adhesive tape to the discs and do not write on the label.
- ◆ Clean them with a special-purpose cloth.
- ◆ Store your compact discs in a clean place, out of direct sunlight, where they will not be exposed to high temperatures.
- ◆ Always use compact discs marked .



Precautions When Using Audio Cassettes

- ◆ Check that the tape in the cassette is sufficiently taught.
- ◆ To prevent erasing a cassette that you wish to keep, remove the safety tab on the upper edge of the cassette. To record a cassette, where the tab has been broken, simply cover the opening with adhesive tape.
- ◆ When you have finished playing a cassette, always put it back in its case.
- ◆ Store your cassettes in a clean place, out of direct sunlight, where they will not be exposed to high temperatures.
- ◆ Avoid using 120-minute cassettes as they place unnecessary strain on the tape mechanism.

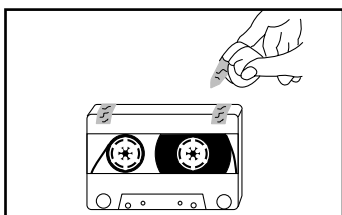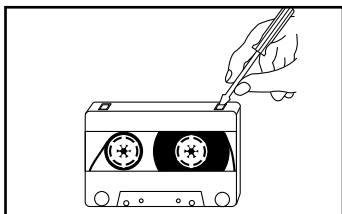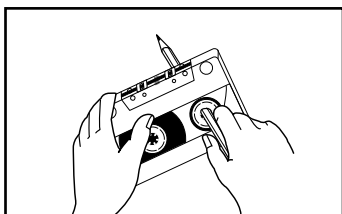

Before Contacting the After-Sales Service

It always takes a little time to become familiar with a new appliance. If you have any of the problems listed below, try the solutions given. They may save you the time and inconvenience of an unnecessary service call.

Problem	Checks/Explanation
The system does not work	<ul style="list-style-type: none"> • The main lead is not correctly plugged into a wall socket or the wall socket is not switched on. • The remote control batteries need replacing or the polarity has not been respected. • The STANDBY/ON button has not been pressed.
There is no sound	<ul style="list-style-type: none"> • The volume has been completely turned down. • The correct function (TUNER, CD, TAPE, AUX) has not been selected. • You have connected a set of earphones. • The loudspeaker wires have been disconnected. • The MUTE button has been pressed.
The Timer does not work	<ul style="list-style-type: none"> • The timer has been stopped by pressing TIMER ON/OFF.
In case it does not work, even the action is taken as above.	<ul style="list-style-type: none"> • Press the P.SURROUND/P.SOUND button for 5 seconds in power 'OFF'(standby), then it is returned the original position (RESET)
The compact disc player does not start playing	<ul style="list-style-type: none"> • The CD function has not been selected. • The disc has been inserted face down or is either dirty or scratched. • The laser sensor is dirty or dusty. • The system has not been installed on a flat, horizontal surface. • Condensation has formed in the player; leave the system in a warm, airy room for at least one hour.
The MP-3 CD player cannot be played.	<ul style="list-style-type: none"> • Use the PC to confirm if the extension is *.mp3.
The tape does not start playing	<ul style="list-style-type: none"> • The TAPE function has not been selected. • The cassette has not been inserted correctly. • The cassette player has not been closed. • The tape is either slack or broken.
The volume falls off The cassette is not erased correctly There is excessive wow and flutter	<ul style="list-style-type: none"> • The audio heads are dirty. • The rollers or drive capstans are dirty. • The tape is worn.
Reception is poor or no radio stations are received at all	<ul style="list-style-type: none"> • The TUNER function has not been selected. • The radio frequency has not been correctly selected. • The aerial has been disconnected or is not facing the right way. Turn it until you find the best orientation. • You are in a building that blocks radio waves; you must use an outside aerial.

If the above guidelines do not allow you to solve the problem, take a note of:

- ◆ The model and serial numbers, normally printed on the rear of the system
 - ◆ Your warranty details
 - ◆ A clear description of the problem
- Then contact your local dealer or SAMSUNG after-sales service.

Technical Specifications

GB

SAMSUNG strives to improve its products at all times. Both the design specifications and these user instructions are thus subject to change without notice.

RADIO

LW

Usable sensitivity 60 dB

AM (MW)

Signal/noise ratio 40 dB

Usable sensitivity 56 dB

Total harmonic distortion 2 %

FM

Signal/noise ratio 55 dB

Usable sensitivity 10 dB

Total harmonic distortion 0.6 %

COMPACT DISC PLAYER

Capacity 3 discs

Frequency range 20 Hz - 20 KHz (± 1 dB)

Signal/noise ratio 85 dB (at 1 KHz) with filter

Distortion 0.05 % (at 1 KHz)

Channel separation 75 dB

Disc sizes Diameter: 120 or 80 mm. Thickness: 1.2 mm

TAPE DECK

Frequency range 125 Hz ~ 10 KHz

Signal/noise ratio 40 dB

Channel separation 30 dB

Erasing effect 50 dB(without filter)

AMPLIFIER

Output power

Main Speaker(6 Ω) 2X40 Watts RMS,IEC (total harmonic distortion: 10 %)

Subwoofer(6 Ω) 2X80 Watts RMS,IEC (total harmonic distortion: 10 %)

 
Channel separation 40 dB

Signal/noise ratio 75 dB

GENERAL

Dimensions 270 (D) x 332 (H) x 426 (W) mm

THIS APPLIANCE IS MANUFACTURED BY:

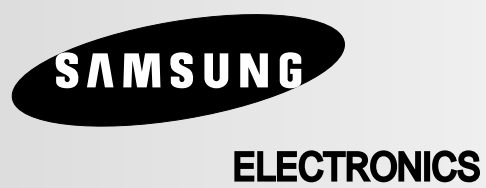

AH68-01454B